

700_LOCK_SS 700 Lock & Indicator Set

Note

This product is to be installed by suitably qualified persons, in a fit-for-purpose application, to suitable materials, using suitable fixings, and complying with any relevant codes.

Dimensions


- Lock: 50mmH x 91mmW X 36mmD
- Indicator: 52mmH x 52mmW X 13mmD
- Staple: 50mmH x 18mmW X 15mmD

Hardware Provided

- 1x Mounting Template
- 1x Fixing Pack (Spare fixings can be ordered using the part number 700SS_LOCKFIXINGS)

Before Installation

- Inspect the product. If there is any damage or missing parts, do not install the product and contact your place of purchase.
- Check that the included fixings will be suitable for the thickness of the toilet partition door.

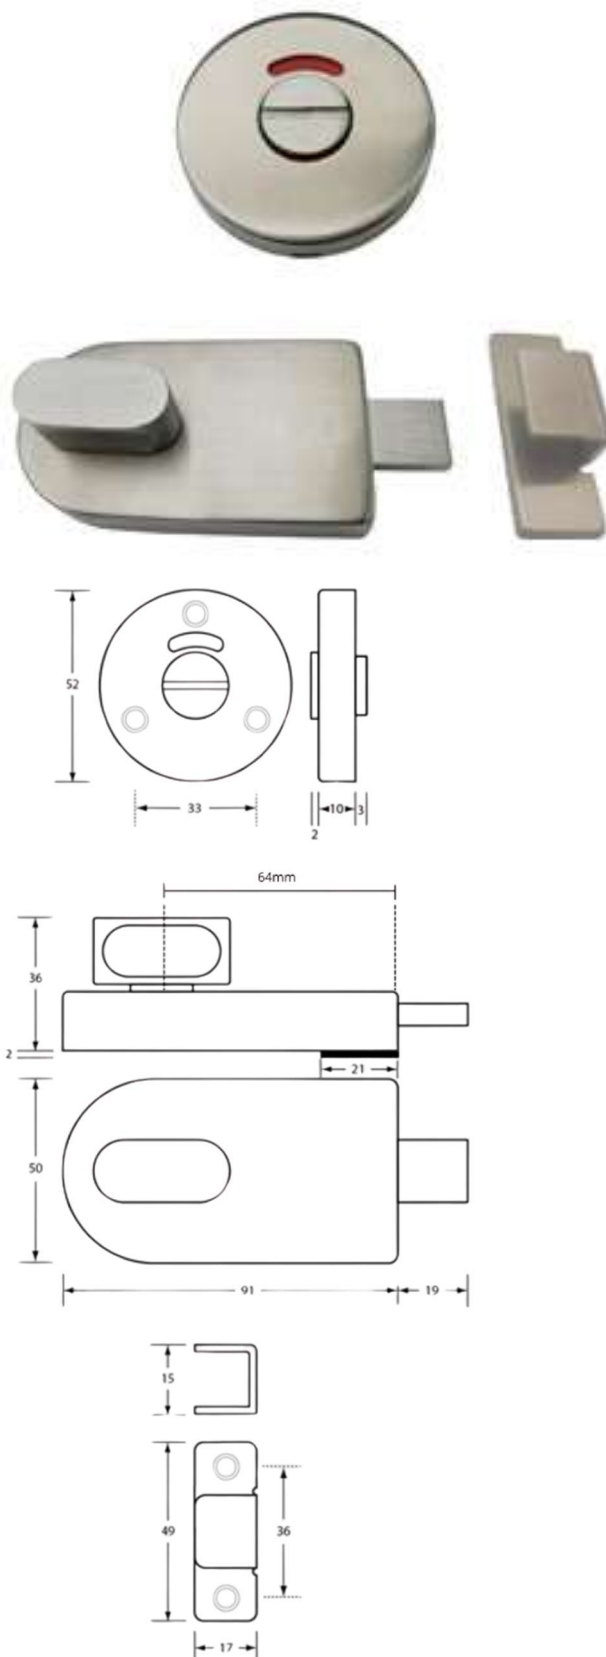

The photographs and line drawings of the products presented above are representational only. Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Installation Instructions

Placement may be subject to regulations/codes and architectural drawings. Correct positioning is the responsibility of the installer.

1. Place the mounting template against the inside of the door and frontal at the desired height.
2. Pre-drill the two holes for the staple labelled "ø2.5".
3. Pre-drill between four and seven holes for the lock labelled "ø2.5" depending on the desired strength.
4. Drill the hole labelled "ø15" through the door.
5. Undo the three screws from the outer edge of the lock. Set the screws aside. Lift the back plate out of the lock.
6. Screw four shorter screws into the door at the marked locations and mount the back plate. If the additional fixing points are to be used, additional screws will need to be sourced.
7. Place the indicator disc over the hole through the door on the outside.
8. Screw the three longer screws through the holes in the indicator disc, fixing it to the door.
9. Place the spindle through the hole in the door and into the rear of the indicator disc, ensuring the green part of the disc is visible through the indicator's window.
10. Place the lock over the back plate and spindle, ensuring the spindle is level. Being careful not to overtighten, replace and tighten the screws on the lock.
11. Turn the lock and test for a smooth locked/unlocked motion.
12. Screw two shorter screws into the frontal at the marked locations and mount the staple, ensuring the latch tongue can be slid inside to properly secure the door while engaged.
13. Test lock and indicator for correct operation.
14. Press the snap-on covers onto the indicator and staple.

Technical recommendations and installation advice from Metlam Australia Pty Ltd are general in nature and provided in good faith without warranty. Metlam disclaims all liability for errors, omissions, or damage resulting from improper installation or maintenance. All products must be installed by qualified tradespeople and maintained by competent personnel. It is the installer's responsibility to conduct thorough pre-installation assessments; Metlam Australia will not enter into post-installation disputes regarding positioning, functionality, or external factors affecting performance.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.