

ML221 Single Towel Rail



Material Specifications

- 19mmØ #304 Stainless Steel Rail and Flange Covers

Mounting

- Surface Mount Concealed Fix

Dimensions

 
 
- 914mm C to C x 65mm Standoff
- Flange:** 50mmW x 50mmH x 13mmD

Finish

- ML221_36B:** Polished Stainless Steel Finish
- ML221_36S:** Satin Stainless Steel Finish

Installation Guidelines

- May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.
1. Remove the concealed wall plate from back of cover flange and mounting arm by loosening the set-screw from the mounting plate.
 2. Locate fixing position on wall or partition and mark using the holes on the mounting plate.
 3. Mount the wall plate (with prongs facing upwards) to the wall and loosely secure using the appropriate fixings at points indicated by 'S' as noted above.
 4. Ensure the mounting plate is level and tighten fixings.
 5. Fit the flange cover and mounting arm over wall plate and secure into position by tightening set-screw at base of flange.
 6. Measure length of rail, locate and mark fixing point for the second flange cover and mounting arm.
 7. Follow steps 3 to 5 and check unit is level to finish installation.

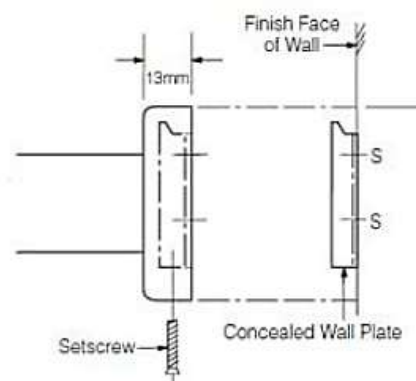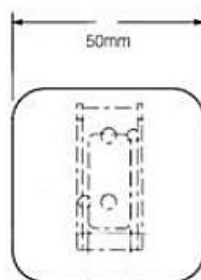

*Rear View of Cover Flange & Mounting Arm, showing position of Concealed Wall Plate.

Features

- Can be adjusted to suit smaller size (cut to size)

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Installation Guidelines Sheet



The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.