## **Installation Guidelines Sheet**



# **ML226 Towel Shelf & Drying Rail Series**

### **Material Specifications**

- #304 Stainless Steel
- 6.5mmØ Shelf and Drying Rails
- All Edges and Mount Bracket Corners Rounded for Safety

#### Mounting

Surface Mount Concealed Fix

#### **Dimensions**

- Overall Size: 125mmH x 210mmD
- ML226\_18S: 457mm C to C
- ML226\_24S or ML226\_24B: 610mm C to C
- ML226\_30S or ML226\_30B: 762mm C to C
- ML226\_36S or ML226\_36B: 914m C to C

#### **Finish**

- **B**: Polished Stainless Steel Finish
- S: Satin Stainless Steel Finish

#### **Installation Guidelines**

- May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.
- Remove the concealed wall plate from back of cover flange and mounting arm by loosening the setscrew from the mounting plate.
- **2.** Locate fixing position on wall or partition and mark using the holes on the mounting plate.
- Mount the wall plate (with prongs facing upwards) to the wall and loosely secure using the appropriate fixings.
- Ensure the mounting plate is level and tighten fixings.
- **5.** Fit the flange cover and mounting arm over wall plate and secure into position by tightening setscrew at base of flange.
- **6.** Measure length of rail, locate and mark fixing point for the second flange cover and mounting arm.
- Follow steps 3 to 5 and check unit is level to finish installation.

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.

Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

