

ML_8100V Vertical Baby Change Station

Material Specifications


- Hi-density bacteria resistant Polyethylene body
- Stainless Steel hinge

Dimensions

- Open: 788mmH x 500mmW x 830mmD
- Closed: 825mmH x 500mmW x 96mmD

Features


- Suitable for infant use up to 22.7kg

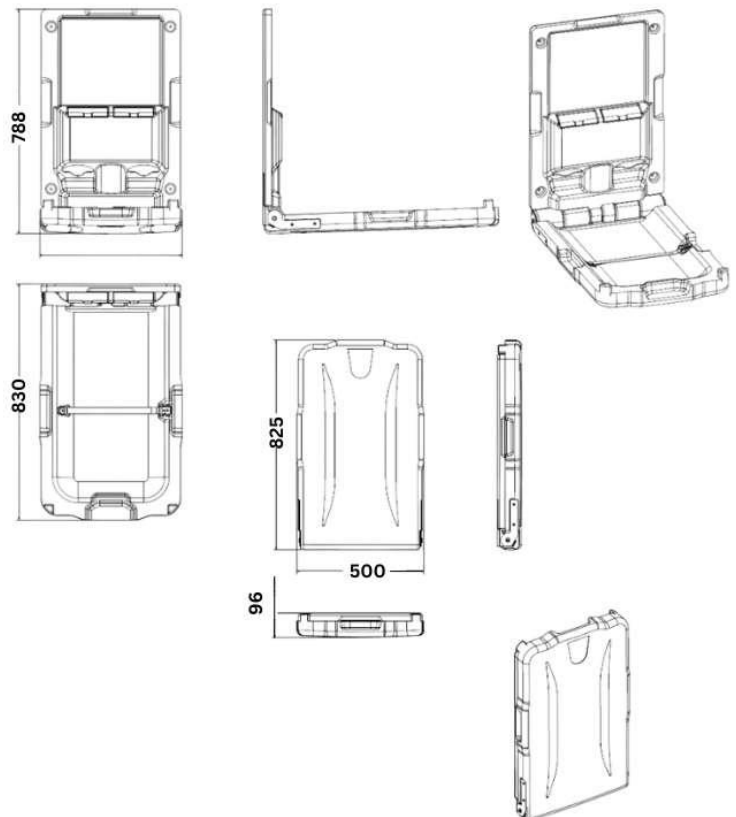

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Tools Needed

- A. Level
- B. Measuring tape
- C. Power drill with 7/32", 1/8", and 1/2" masonry bits
- D. Power screwdriver with bull-nose Phillips bit

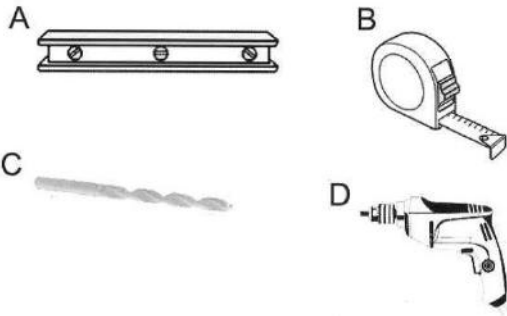

Hardware Provided

- 4x 3" Wood Screws (For Wood Studs)
- 4x 3/4" Finishing Washers (For Wood Studs)
- 2x 3" Machine Screws (For Use With Toggle Anchors)
- 4x 3/4" Flat Washers (For Use With Toggle Anchors Or Wood Studs)
- 2x Toggle Anchors
- 6x 1-1/4" Caps
- 1x Door/Wall Plate (can be mounted outside the room)

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Installation Guidelines

May be subject to Australian Building Code

Regulations for height and location fixing and may be subject to placement as per architectural drawings.

In all cases, this is the responsibility of the installer.

1. Locate wood stud where the left side of the changing station will be mounted to the wall.
2. In the centre of that wood stud, mark the location of the top-left mounting hole. The suggested height for this mark is 146cm (57.5") from the floor.
3. Hold the changing station up and align its top-left corner hole with the mark on the wall.
4. Using a level and a measuring tape, mark the locations of the remaining three (3) mounting holes.
(This may require 2 people.)
5. Set the changing station down.
6. Use a power drill and appropriate drill bit to drill four (4) holes in the wall.




NOTE1: For wood studs:

- If the finished wall surface is tile or masonry over wood studs, use a 7/32" masonry bit for the pilot hole until you hit the wood stud, then switch to a 1/8" bit.
- Use wood screws, finishing washers, and flat washers (Fig. a).

NOTE2: For use with toggle anchors

- If the finished wall surface has wood studs that are not 16" on centre, has metal studs, or has an underlying surface of concrete block use a 1/2" bit.
- Use machine screws and flat washers (Fig. b).
- For holes NOT located on a wood stud, toggle anchors must be used (Fig. c).
See: "Using Toggle Anchors" section.

 7. Align holes in changing station with drilled holes and secure top left corner of changing station to wall stud using the appropriate screw and washer. Continue to secure the three (3) remaining corners using the appropriate screws and washers as described in Note 1 or Note 2.
8. Ensure all four (4) screws are tight and snap caps over screw heads.

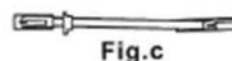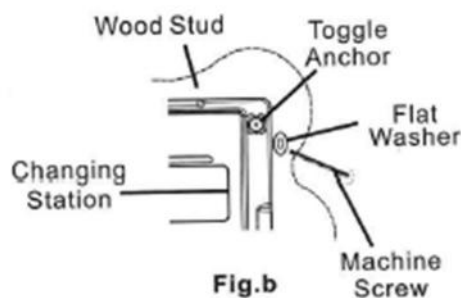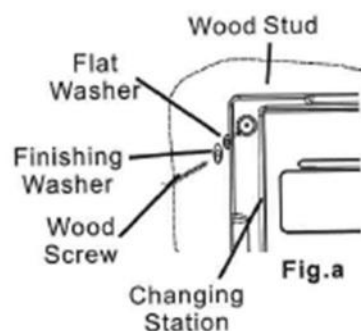

WARNING

All 4 of these location MUST be used for safe installation. The lower holes ensure installation through the metal brackets



The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Using Toggle Anchors

1. Insert the metal end of toggle anchor into 1/2" hole.
2. Slide the zip strip down snugly against wall.
3. Snap off break-away pieces of toggle anchor (Fig. d)
4. Align holes in the changing station with toggle anchors and secure the top left corner of the changing station to the wall using machine screws and flat washers. Continue to secure the three (3) remaining corners using machine screws and flat washers.
5. Ensure all four (4) screws are tight and snap caps over screw heads.

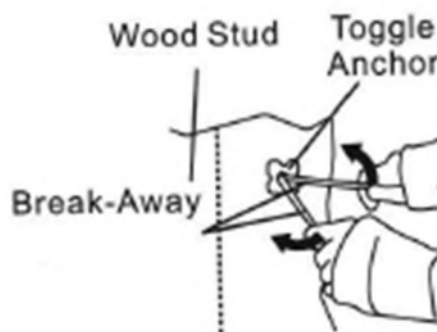


Fig.d

Recommended Blocking

If the walls do not have studs on centre, then additional blocking is necessary (Fig.e).

Contact an architect or building contractor to make sure the blocking is adequate and complies with building codes.

Operation

Rotate base downward. Place infant on top of the changing surface. Use restraint system as described below. After child has been changed, remove restraint system and rotate base back up against the wall.

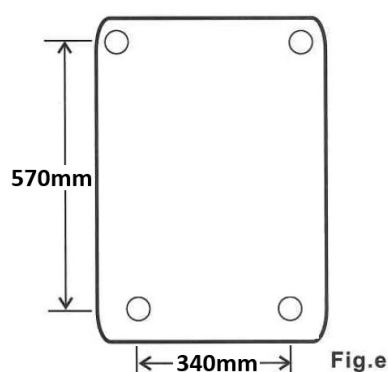


Fig.e

Use Of Restraint System

Place child so restraint strap is located at abdomen. Rotate top of buckle upward and insert strap in buckle. Pull strap through buckle until snug against infant. Rotate top of buckle downward to lock the strap into place. Slide yellow locking tab over top of buckle (Fig. f). Reverse steps to loosen strap.

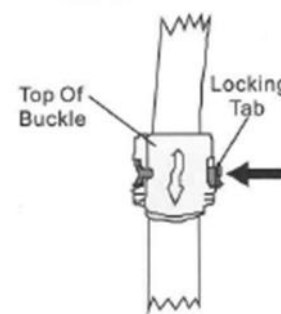


Fig.f


Care & Maintenance

Check all hardware and components monthly or as required to ensure hardware is tight and there are no missing or damaged components. Take unit out of service if any component is missing or damaged and contact customer service to order replacement parts. Do not substitute parts.

Clean by using a damp cloth with mild soap or mild multi-purpose cleaner. Do not use any strong chemical cleaners or cleaning agents that may be hazardous to children.

Warning

- Never leave child unattended.
- Always use restraint.
- Use table surface only for changing infants.
- Do not place child on table without securing strap.
- Maximum weight: 50 lb (22.7 kg).
- Failure to follow instructions may result in injury.

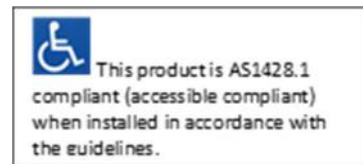

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.