

## ML\_IMC2\_SS Integrated Mirror Fronted Cabinet

### Material Specifications

- #304 Stainless Steel
- 5mm Safety Glass

### Dimensions/Features

- **Cabinet Size:** 610mmH x 461mmW X 170mmD, includes Soap Dispenser and Paper Towel Dispenser

### Installation Guidelines

**Step 1:** Please refer to the architectural drawings for required product placement and height. **UNIT MUST BE ATTACHED TO A SOLID WALL OR IN-WALL SUPPORT.**

 
 
**Step 2:** Locate the x 4 mounting holes on the back of the unit. Based on the installation height required, mark the 4 mounting points on the wall. Please check the mounting hole measurements as slight variations may occur due to manufacturing tolerance.

**Step 3:** Using a drill, drill x 4 mounting holes in the marked locations on the wall.

**Step 4:** Drive the x 4 M8 90mm expansion bolts provided into the drilled mounting holes.

**Step 5:** Open the front of the mirror to approx. 45°. Using 2 people, lift the mirror cabinet and slowly align it with the expansion bolts on the wall.

**Step 6:** After placing the unit over the expansion bolts, secure the unit with nuts to complete the installation.

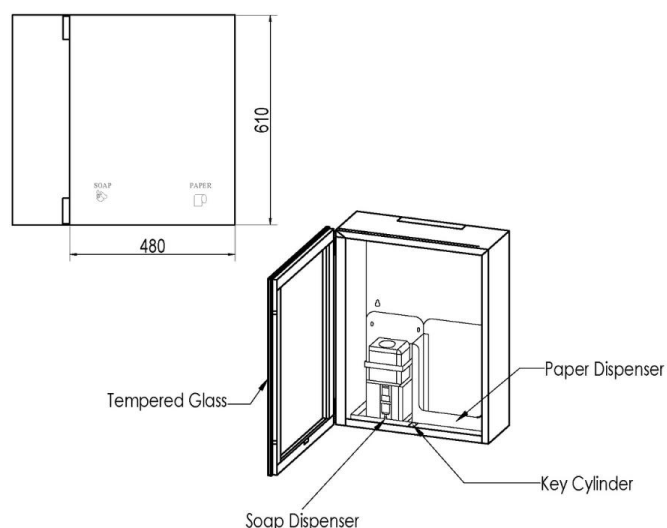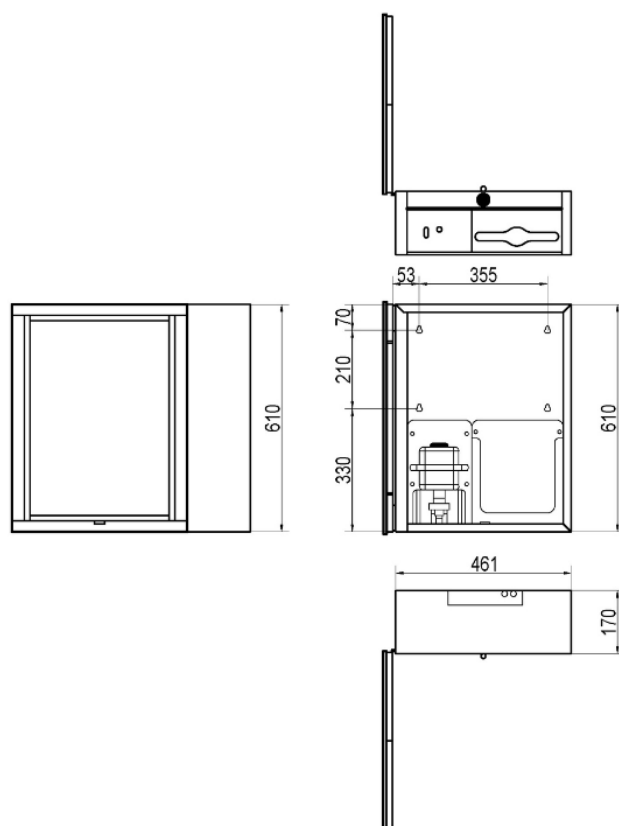


## How to Replace the Soap and Battery on the ML\_IMC2\_SS

### Requirements:

- **Battery Size:** 4 x 'C' Battery.
- **Soap:** A Commercial Grade Liquid Soap with a Viscosity range of 100- 3800cps (centipoises) and a PH level between 6.50 – 9.00 should be used in this dispenser to ensure the dispenser performs at an optimal level.

*\* Any liquids not within these ranges may cause the unit to operate at a sub-optimal level, fail or damage the unit and void the Metlam Australia product warranty.*
 
### A) Battery Installation & Replacement:

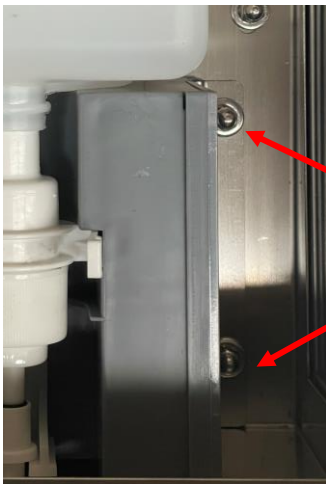

**Step 1:** Loosen the left and right fixing nuts.



**Step 2:** To remove the soap dispenser slide it in an upwards direction.



**Step 3:** Slide the battery compartment cover off in the direction of the arrow.

**Step 4:** Replace the battery with x 4 'C' size battery.


The photographs and line drawings of the products presented above are representational only.  
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.



**Step 5:** Please move the lever upward to turn off and downward to turn on, following the upright position of the soap unit.



 **Step 6:** Reinstall the soap dispenser.

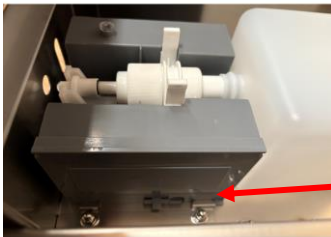

*Once installed in the unit, the battery compartment and on/off switch will be located here.*

## **B) Replacing the liquid soap:**

**Step 1:** Open the lid and pour in the liquid soap.

Please note the image to the right showcases the suggested minimum amount of liquid soap required.



The photographs and line drawings of the products presented above are representational only.  
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

---

**Notes:**

- May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.
- To ensure the soap dispenser sensor works as intended, install the soap dispenser no less than 200mm from the countertop to the underside of the soap dispenser.
- **Please note mirrors must be inspected within 48 hours of delivery.**

The photographs and line drawings of the products presented above are representational only.  
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.