

As the leading manufacturer of Toilet Partition Hardware, Metlam Australia understands the challenges faced by those who don't specialise in the industry.

This information sheet is to assist you in determining the handing for an Ambulant Lock.

If you have an Ambulant Lock and are unsure if it is a LH or RH Lock, simply enter the cubicle and face the back of the cubicle door as if you were sitting on the toilet. You would mount the lock on the side where the lever on the handle will turn over, rather than under. **(Please see image below as a reference).**




Installation of Ambulant Lock based on Hinge Handing

If you are trying to determine which handing you need based on where the hinges are mounted, then please follow the below;

1. If your hinges are mounted on the inside for the door to open inward, you would want the opposite handing Ambulant Lock as the hinges.
2. If your hinges are mounted on the outside for the door to open outward, you would want the same handing Ambulant Lock as the hinges.

LEFT HINGE

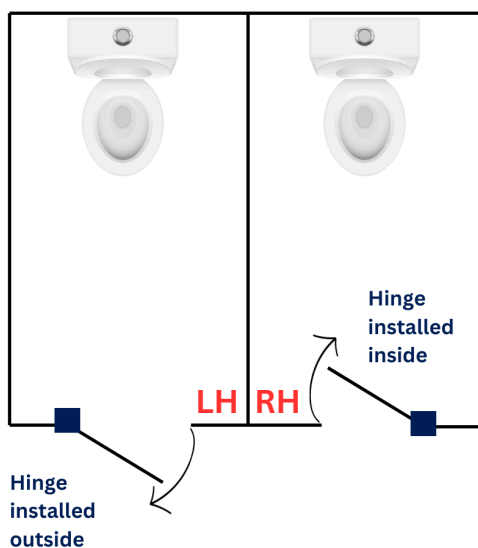

RIGHT HINGE

