

## ML0670 Skirting or Wall Mounted & ML0672 Floor Mounted Concealed Door Stop

### Material Specifications

- Die Cast Zinc
- Rubber Bumper

### Mounting

- Surface Mount Concealed Fix

### Dimensions

- **ML0670:** 35mmW x 35mmH x 83mmD
- **ML0672:** 50mmØ x 40mmD

### Installation Guidelines

- *May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.*

1. Unscrew rubber bumper from the door stop.  
ML0670



ML0672




2. Using the fixings provided, secure the door stop to skirting, wall or floor.
3. Ensure that the fixings are tight and secure.
4. Re-screw bumper back on to door stop to finish installation.

### Features


- Rubber bumpers protect walls and doors from being damaged.



\*ML0670

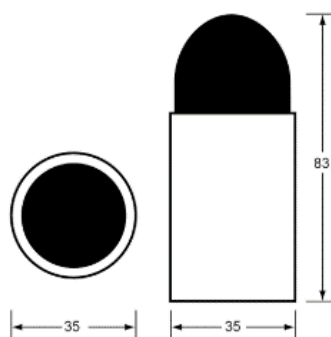

\*ML0672

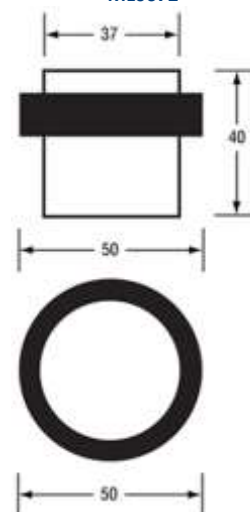

*The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.*

The photographs and line drawings of the products presented above are representational only.  
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.