Installation Guidelines

MODA_☐HSOFTCLOSE Moda Soft-Close Hinge


Note
This product is to be installed by suitably qualified persons, in a fit-for-purpose application, to suitable materials, using suitable fixings, and complying with any relevant codes.


Dimensions
76mmH x 96mmW X 34mmD

Hardware Provided
- 1x 6mm Hex L-Wrench (For Spring Adjustment)
- 1x 2mm Hex L-Wrench (For Grub Screw)
- 6x 5x25mm Countersunk Screws

Before Installation
- Inspect the product. If there is any damage or missing parts, do not install the product and contact your place of purchase.
-
- Check that the included fixings will be suitable for the thickness of the toilet partition door.



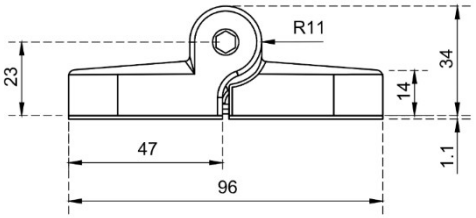

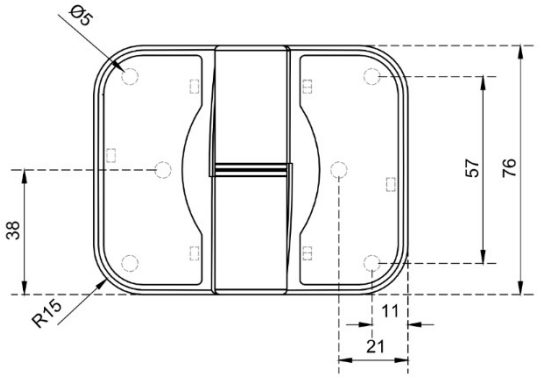

*Images depict model MODA_LHSOFTCLOSE_SCP


The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Installation Guidelines

Installation Instructions

Placement may be subject to regulations/codes and architectural drawings. Correct positioning is the responsibility of the installer.

1. Open the hinge and separate the two leaves.
2. Determine which is the lower leaf by identifying the leaf with the grub screw and pin.
3. Based on the nominated position of the door once installed, measure 200mm down from the top of the door for the top hinge, or 200mm up from the bottom of the door for the bottom hinge, to the nearest edge of the hinge leaf. At this position, align the side of the lower hinge leaf flush with the edge of the frontal.
4. Mark the hole positions and drill three pilot holes.
5. Fix the lower leaf into the pre-drilled pilot holes using three screws, being careful not to overtighten.
6. Place the upper leaf onto the lower leaf. Push the two leaves fully together until the knuckles touch.
7. Push the upper leaf flat against the door. Mark the hole positions and drill three pilot holes.
8. Fix the upper leaf into the pre-drilled pilot holes using three screws, being careful not to overtighten.
9. Insert the 2mm hex L-wrench into the grub screw on the lower knuckle and hold it in position.
10. Insert the 6mm hex L-wrench into the pin through the bottom of the hinge and rotate it towards the door until you feel the spring engage.
11. While maintaining the spring tension with the 6mm hex L-wrench, tighten the grub screw using the 2mm hex L-wrench. Gently move the 6 mm hex L-wrench back and forth as you tighten the grub screw to help it locate securely into one of the six dimples in the pin.
12. Open and close the door to test for correct operation.
13. Fit the snap-on covers to both hinge leaves.

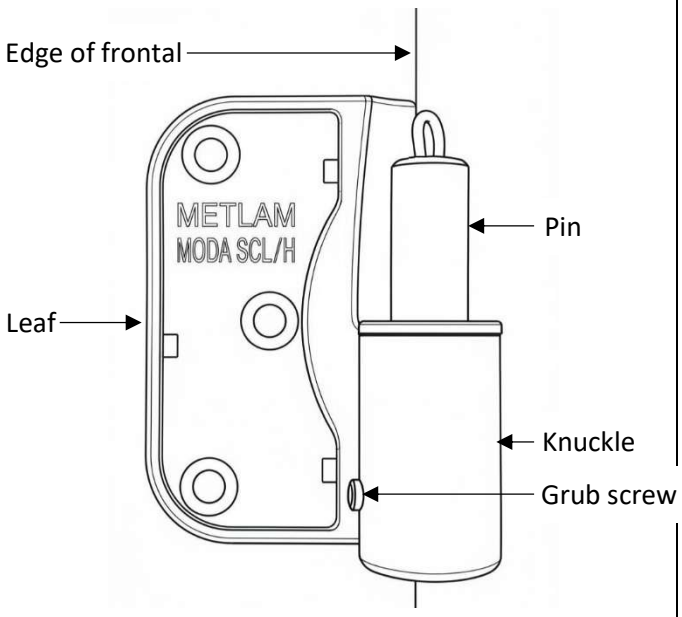



Technical recommendations and installation advice from Metlam Australia Pty Ltd are general in nature and provided in good faith without warranty. Metlam disclaims all liability for errors, omissions, or damage resulting from improper installation or maintenance. All products must be installed by qualified tradespeople and maintained by competent personnel. It is the installer's responsibility to conduct thorough pre-installation assessments; Metlam Australia will not enter into post-installation disputes regarding positioning, functionality, or external factors affecting performance.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.