

Straight Shower Curtain Track System

Material Specifications

- Clear Anodised Aluminium

Dimensions

- **SCT_S1200:** Micro Shower Curtain Track Straight - 1200mm
- **SCT_2000MM_MICRO:** Micro Shower Curtain Track Straight - 2000mm



Components Supplied

- Track, Hooks & Wall Mount Bracket

Mounting

- Concealed Screw Fix


Installation Guidelines

- *May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.*

1. Before beginning installation, ensure that the curtain track is the right size, if required cut it down to size.
2. Locate correct placement on the wall and install the wall mount brackets.
3. Insert the curtain hooks into the track and then install the curtain track into the wall mount brackets, ensuring that the track is level.
4. Hang the shower curtain (not supplied) to finish installation.



Hook

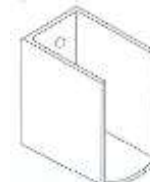

Wall Mount Bracket



Operation

- Can be cut back on site to suit requirements
- Curtains sold separately



This product is AS1428.1 compliant (accessible compliant) when installed in accordance with the guidelines.

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.