


## Metlam Australia Essential Toilet Partition Hardware Kit Installation Instructions

### Screw Fix Installation Instructions:

1. Metlam Australia Ready to go Toilet Partition Hardware Kits are supplied with a universal fixing pack to suit board thickness variation between 13mm-25mm+
2. Before hanging the door, fix hinges to the frontal blade to the desired Handing (Right Hand or Left Hand).  
 Note: 3 Hinges per door recommended to ensure door bowing does not occur.

3. To hang the door: Stand door in doorway of cubicle, placing door on a jack. Adjust position and height using spacers.


4. Once the door has been hung:
  - a. Attach bumper.
  - b. Fit Lock
  - c. Fit Indicator
  - d. Fit the staple to the frontal ensuring a smooth fix when the indicator latch is rotated to the closed position
  - e. Install the coat hook/door stop ensuring none of the door hardware hits the division panel or wall

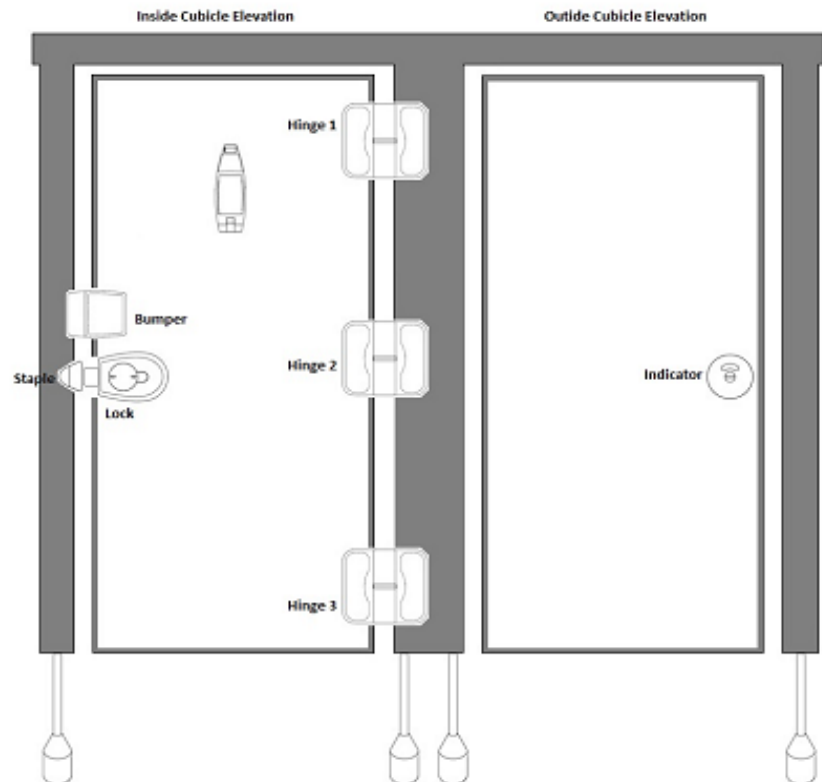

5. For the Gravity hinges, measure and locate hinge fixings heights on the rear of the frontal. Position leaf without the pin along the inner rear edge of the frontal. Mark and pre-drill rear of frontal for fixing, then secure hinges with appropriate fasteners. Then screw loose leaf hinge to door.
6. Note: if using a screw fix set up ensure the screws are no greater than 90% in length of the material thickness where the hinge is being affixed. If using a Bolt Through set up, ensure the all thread ordered exceeds material thickness by at least 7mm either side for securing of the dome nuts/washers. An alternate Bolt Through set up is to use the Metlam 106C Concealed Fix Faceplate (refer to website for further details). Recommendation is to use the Loctite® or similar on Bolt Through Fixings.
7. Locate/hang door onto pre-fixed hinges at rear of frontal. Check action for smooth uninterrupted opening/closing.

**NOTE TO INSTALLER: Allow a 2mm drop in the hinge**

### Maintaining your Metlam Australia Toilet Partition Hardware:

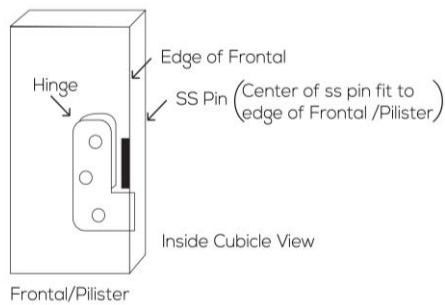

For optimal performance, a regular cleaning regime is recommended using a dry cloth. Wipe down your Metlam Australia toilet partition hardware components to ensure no dirt or grime build up. **Never use chemical cleaners and abrasives, such as stainless wool to clean your toilet partition hardware as this may damage the finish and functioning of the product and void your warranty.**

#### **Preventative Hinge Maintenance:**

Metlam Australia recommends a 12 monthly maintenance regime to ensure product longevity. Metlam Hinges come with Lift Off Capability so you can remove the door from the hinge with ease. After the door has been removed:

- 1. Wipe down the hinge barrel with a clean cloth or paper towel to remove grime and dust build up.**
- 2. Lightly spray the hinge pin with a Silicone spray remembering to wipe off any excess spray from the hinge and partition door.**
- 3. Return door to cubicle frame by reinserting the hinge pin into the barrel.**