

ML244 Soap Drip Tray

Note

This product is to be installed by suitably qualified persons, in a fit-for-purpose application, to suitable materials, using suitable fixings, and complying with any relevant codes.

Dimensions

20mmH x 165mmW X 125mmD

Hardware Provided

Please be aware that fixings are not included.


Before Installation

- Inspect the product. If there is any damage or missing parts, do not install the product and contact your place of purchase.
- Ensure the surface you wish to mount the tray to is either solid or has adequate in-wall support.
- Ensure the surface you wish to mount the tray to is flat.

Installation Instructions

Placement may be subject to regulations/codes and architectural drawings. Correct positioning is the responsibility of the installer.

1. Locate fixing position on mounting surface and mark the mounting holes, ensuring tray is level.
2. Drill holes and loosely secure tray to mounting surface using appropriate fixings (not supplied).
3. Check that the tray is level and tighten fixings.
4. Apply a bead of silicone between the rear of the tray and the mounting surface to prevent any soap from dripping down the rear of the tray.

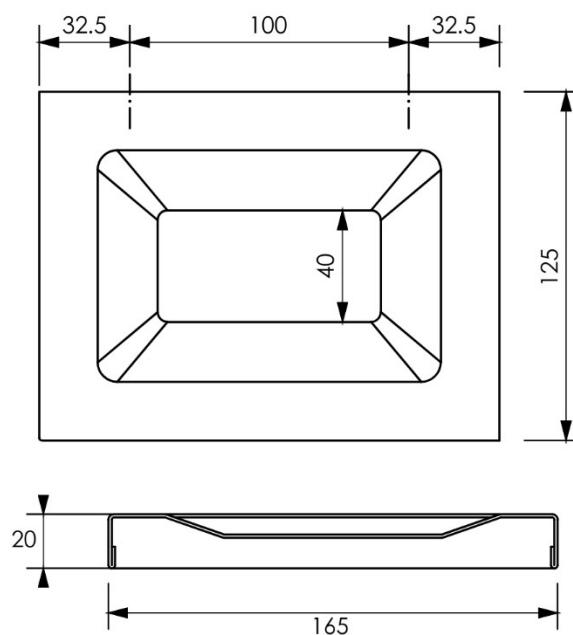

Technical recommendations and installation advice from Metlam Australia Pty Ltd are general in nature and provided in good faith without warranty. Metlam disclaims all liability for errors, omissions, or damage resulting from improper installation or maintenance. All products must be installed by qualified tradespeople and maintained by competent personnel. It is the installer's responsibility to conduct thorough pre-installation assessments; Metlam Australia will not enter into post-installation disputes regarding positioning, functionality, or external factors affecting performance.