Installation Guidelines Sheet



ML4156 Stainless Steel Catheter/IV Hook

Material Specifications

- Stainless Steel Body
- Exposed Fix Mounting
- Hook Welded to Mounting Plate

Mounting

Visible Screw Fix

Dimensions

48mmW x 112mmH x 66mmD

Finish

Satin Stainless Steel


Installation Guidelines

- May be subject to Australian Building Code Regulations or architectural plans for installation height, which is the responsibility of the installer. It is recommended that any individual unit is installed whereby it clears any other fixtures by at least 150mm and not carry loads any greater than 20kg.
- Locate fixing position on wall and mark using mounting holes, ensuring hook is level.
- Drill holes and loosely secure unit to wall surface using appropriate screws and wall plugs.
- 3. Check the hook is level and tighten screws to finish installation.

Operation

Ideal for use in hospitals or health and aged care facilities.



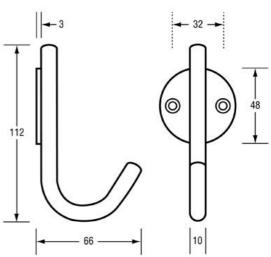

This product is AS1428.1 compliant (accessible compliant) when installed in accordance with the guidelines.

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.

Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.